

FIGURE 1

BEST AVAILABLE COPY

SINGLE MEDIA




FIGURE 2

DOUBLE LAYER MEDIA

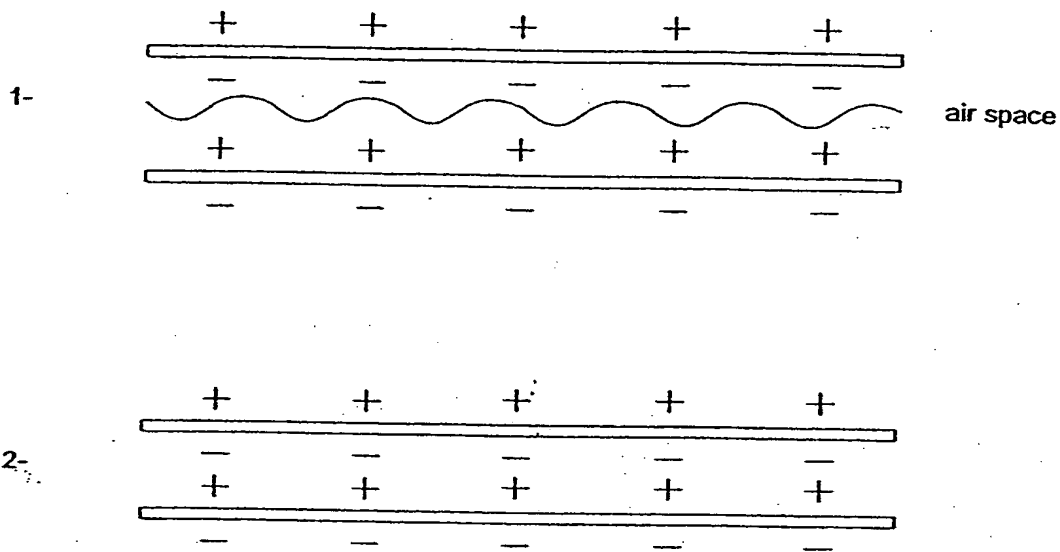


FIGURE 3

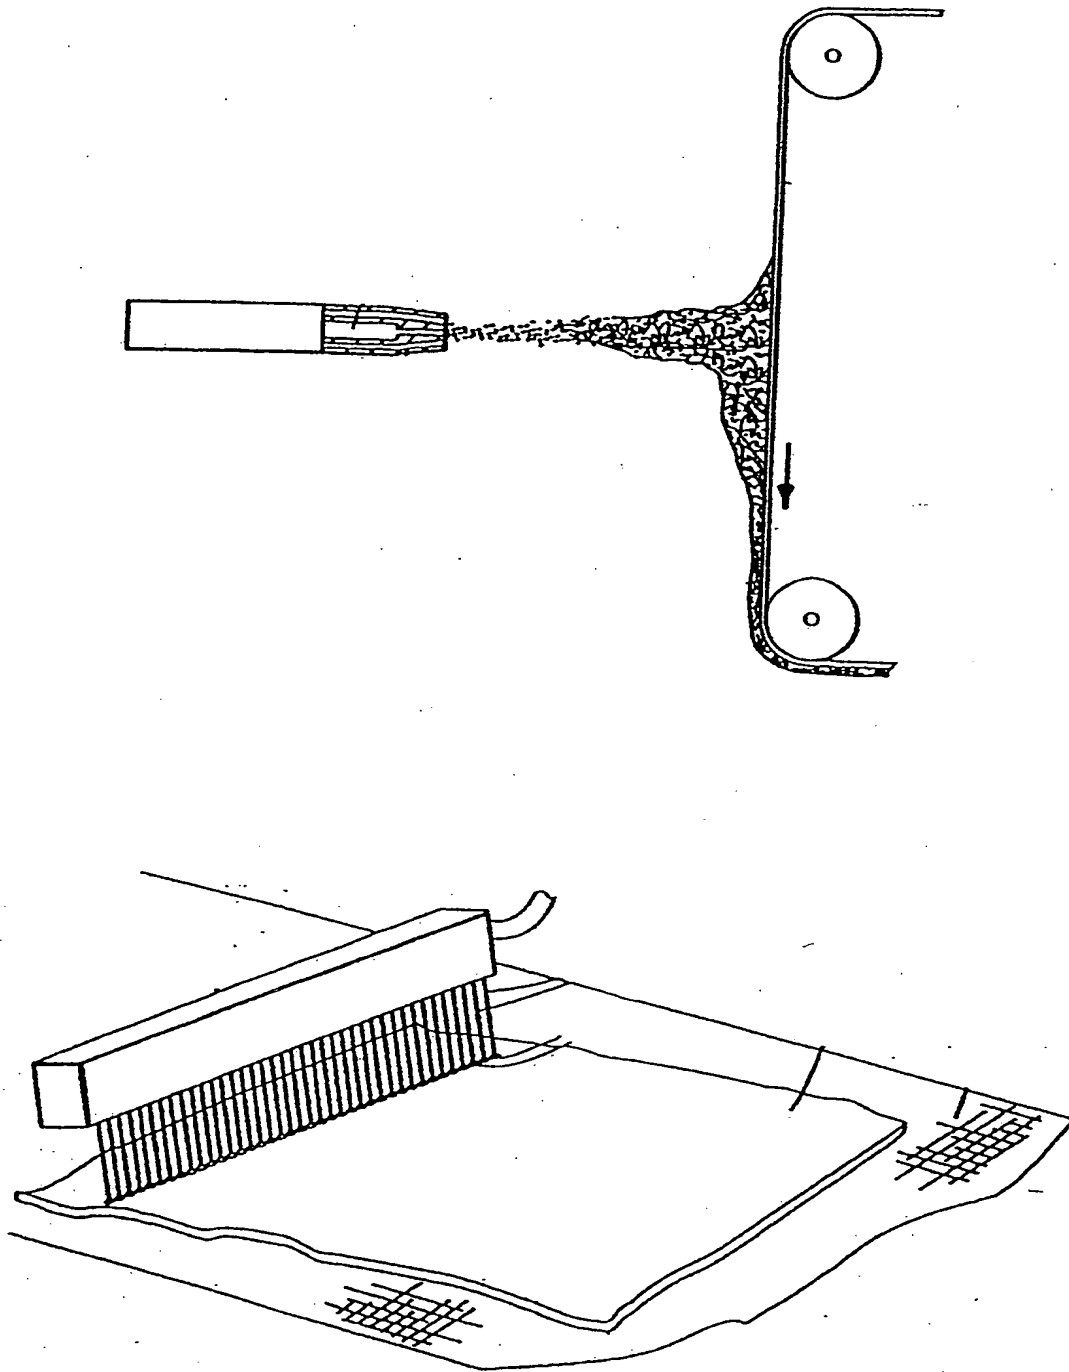
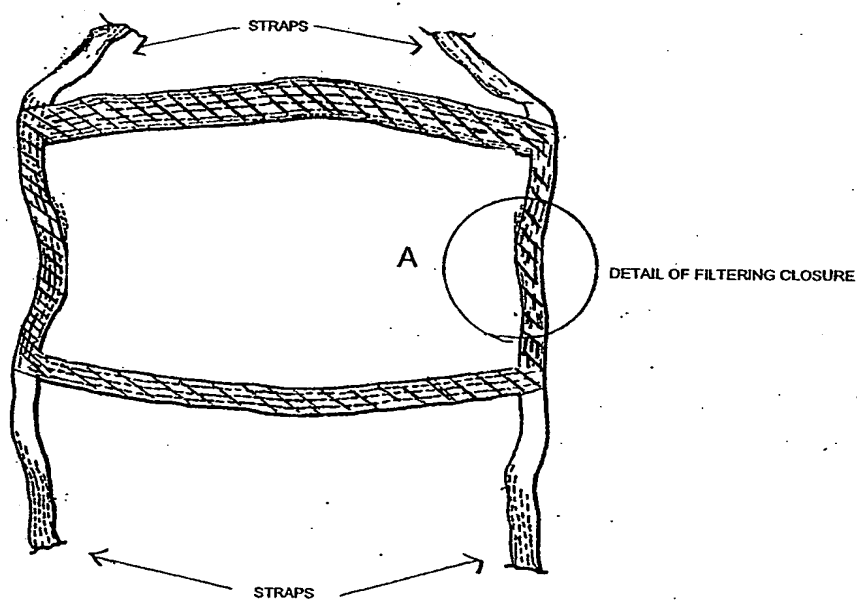


FIGURE 4

FIGURE 5



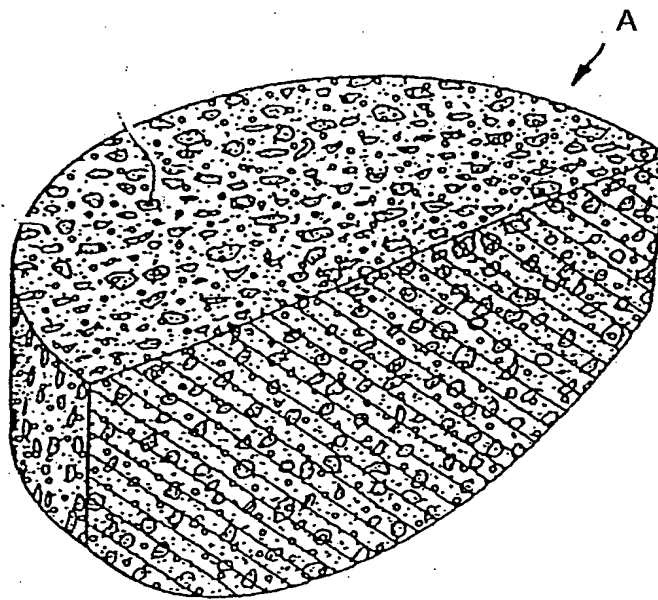


FIGURE 6

10/528006

EXHIBIT A

Experiment No AF276: Biocidal air filtration membrane project:
Performance of different filtration membrane against BG spores
for 30, 60, 120, 180, 240, 300 and 360 minutes of filtration

BG			
30 min 7.5 LPM			
	DL	CFU total	% Reduction
2M03-01-75C+	19.5	0.00E+00	100.000000%
2M03-01-75C+	21.5	0.00E+00	100.000000%
Transweb	17.5	1.75E+01	99.99471%
C+	21.5	3.31E+05	0.00000%

BG			
60 min 7.5 LPM			
	DL	CFU total	% Reduction
2M03-01-75C+	21.0	0.00E+00	100.000000%
2M03-01-75C+	20.5	0.00E+00	100.000000%
Transweb	20.0	0.00E+00	100.000000%
C+	18.5	1.49E+06	0.000000%

BG			
120 min 7.5 LPM			
	DL	CFU total	% Reduction
2M03-01-75C+	12.5	0.00E+00	100.000000%
2M03-01-75C+	19.0	0.00E+00	100.000000%
Transweb	6.5	1.30E+01	99.99496%
C+	16.0	2.58E+05	0.00000%

BG			
180 min 7.5 LPM			
	DL	CFU total	% Reduction
2M03-01-75C+	16.0	3.20E+01	99.99924%
2M03-01-75C+	17.0	0.00E+00	100.000000%
Transweb	15.0	0.00E+00	100.000000%
C+	18.5	4.20E+06	0.000000%

BG			
240 min 7.5 LPM			
	DL	CFU total	% Reduction
2M03-01-75C+	19.0	0.00E+00	100.000000%
2M03-01-75C+	16.0	0.00E+00	100.000000%
Transweb	11.0	0.00E+00	100.000000%
C+	13.0	4.21E+06	0.00000%

BG			
300 min 7.5 LPM			
	DL	CFU total	% Reduction
2M03-01-75C+	13.5	2.70E+01	99.99884%
2M03-01-75C+	16.0	0.00E+00	100.000000%
Transweb	9.0	0.00E+00	100.000000%
C+	9.0	2.32E+06	0.000000%

EXHIBIT A

Experiment No AF276: Biocidal air filtration membrane project:
Performance of different filtration membrane against BG spores
for 30, 60, 120, 180, 240, 300 and 360 minutes of filtration

		BG	
		360 min 7.5 LPM	
	DL	CFU total	% Reduction
2M03-01-75C+	9.0	0.00E+00	100.000000%
2M03-01-75C+	16.0	4.80E+01	99.999233%
Transweb	14.0	0.00E+00	100.000000%
C+	11.0	6.20E+06	0.000000%

For BG tests

Challenge microorganism: BG

Aerosol generated by: 6 jets Modified Collision Nebulizer

pre-vaporisation: 30 min

Air flow velocity : 7.5 LPM

Nebulizer air flow : 40 PSI

Filtration time : 30 minutes

Collection fluid : 5 ml of PBS with 0.001% antifoam A

Sampling on TSA

2M03-01-75C+	Non-woven + Trilosyn + Electrostatic charge
Transweb	Electrostatic non-woven without Trilosyn
DL	Detection Level

10/528006

EXHIBIT B

Biocidal air filtration membrane project:
Performance of different filtration membrane against MS2 viruses
for 60, 120, 180, 240, 300 and 360 minutes of filtration

MS2			
60 min			
	DL	PFU total	% Reduction
2M03-01-92C+	4.2	0.00E+00	100.000000%
Transweb	4.3	1.29E+03	99.89250%
C+	4.0	1.20E+06	0.000000%

MS2			
180 min			
	DL	PFU total	% Reduction
2M03-01-92C+	4.0	0.00E+00	100.000000%
Transweb	3.5	4.23E+03	99.94125%
C+	3.6	7.20E+06	0.000000%

MS2			
300 min			
	DL	PFU total	% Reduction
2M03-01-92C+	4.1	0.00E+00	100.000000%
Transweb	3.9	4.79E+05	96.45185%
C+	4.2	1.35E+07	0.000000%

MS2			
120 min			
	DL	PFU total	% Reduction
2M03-01-92C+	4.0	0.00E+00	100.000000%
Transweb	2.2	1.76E+03	99.08808%
C+	4.1	1.93E+05	0.000000%

MS2			
240 min			
	DL	PFU total	% Reduction
2M03-01-92C+	3.9	0.00E+00	100.000000%
Transweb	3.9	8.34E+04	99.01882%
C+	3.9	8.50E+06	0.000000%

EXHIBIT B**Biocidal air filtration membrane project:**

Performance of different filtration membrane against MS2 viruses
for 60, 120, 180, 240, 300 and 360 minutes of filtration

		MS2	
		360 min	7.5 LPM
	DL	PFU total	% Reduction
2M03-01-92C+	3.8	0.00E+00	100.000000%
Transweb	3.9	4.62E+05	97.47541%
C+	3.9	1.83E+07	0.000000%

For MS2 tests

Challenge microorganism: MS2

6 jets Modified Collision

Aerosol generated by: Nebulizer

pre-vaporisation: 30 min

Air flow velocity : 7.5 LPM

Nebulizer air flow : 40 PSI

Filtration time : 30 min, 1, 2, 3, 4, 5 and 6 hours

Collection fluid : 5 ml of PBS with 0.001% antifoam A

Sampling on MS2 media by single layer soft agar

2M03-01-92C+ :	Non woven + Triosyn + Electrostatic Charge
Transweb :	Electrostatic Non Woven without Triosyn
DL :	Detection Level

10/528006

EXHIBIT B

**Experiment No AF270: Biocidal air filtration membrane project:
Performance of different filtration membrane against MS2 virus
for 30 minutes of filtration**

		MS2	
		30 min	7.5 LPM
	DL	PFU total	% Reduction
M03-01-69-C+	4.3	0.00E+00	100.000000%
M03-01-81-C+	4.2	0.00E+00	100.000000%
Transweb	4.0	2.48E+02	99.99757%
C+	3.9	1.02E+07	0.000000%

For MS2 testsChallenge microorganism: **MS2**

6 jets Modified Collision

Aerosol generated by: Nebulizer

pre-vaporisation: 30 min

Air flow velocity : 7.5 LPM

Nebulizer air flow : 40 PSI

Filtration time : 30 minutes

Collection fluid : 5 ml of PBS with 0.001% antifoam A

Sampling on MS2 media by single layer soft agar

M03-01-69-C+	Non woven + Trilosyn + Electrostatic Charge
Transweb	Electrostatic non-woven without Trilosyn
DL	Detection Level

**This Page is Inserted by IFW Indexing and Scanning
Operations and is not part of the Official Record**

BEST AVAILABLE IMAGES

Defective images within this document are accurate representations of the original documents submitted by the applicant.

Defects in the images include but are not limited to the items checked:

- ☒ ~~BLACK BORDERS~~
- ☐ IMAGE CUT OFF AT TOP, BOTTOM OR SIDES
- ☒ ~~FADED TEXT OR DRAWING~~
- ☒ ~~BLURRED OR ILLEGIBLE TEXT OR DRAWING~~
- ☐ SKEWED/SLANTED IMAGES
- ☐ COLOR OR BLACK AND WHITE PHOTOGRAPHS
- ☐ GRAY SCALE DOCUMENTS
- ☐ LINES OR MARKS ON ORIGINAL DOCUMENT
- ☐ REFERENCE(S) OR EXHIBIT(S) SUBMITTED ARE POOR QUALITY
- ☐ OTHER: _____

IMAGES ARE BEST AVAILABLE COPY.

As rescanning these documents will not correct the image problems checked, please do not report these problems to the IFW Image Problem Mailbox.